

Hello and Welcome to the Coin Operated Laundry.

All of our washing machines automatically have laundry soap & fabric softener dispensed during the wash cycles for your convenience.

As with other Coin Operated laundries, our machines are simple as 1 – 2 – 3.

1. Place your clothes into the washer drum and close the door so that it catches.
2. Insert your coins as indicated above the coin slot.
3. Your wash will be complete in about 30minutes. Please check the drum for any soon-to-be lost socks or other items before going to the dryers.

For our Fully Automated Washer/Dryer Combo (The large full wall size units #4 & #5)

The washer/dryer combo units begin with a 1 minute rinse of the drum. After checking to make sure the drum is empty, please shut and lock the door.

Once the door is locked, please press the “rinse drum” button. After the 1 minute rinse is complete, please open the door and load your laundry (**Step 1**). Please remember that all of our washers automatically dispense laundry detergent and fabric softner for your convenience.

Step 2: There are 2 sizes of wash load to select from

- Regular (Standard) load
- Small load

As you'll see in the figure below, please select regular/small/wash only or dry only:

Standard wash and dry	60 minutes (25 min wash/35 min dry)	1,000 Yen
Small wash & dry	40 minutes (25 min wash/15 min dry)	800 Yen
Only wash	Up to 17kg (max capacity)	800 Yen
Only dry	10 minutes	100 Yen

If you do not want the fabric softner, select the large white button.

Step 3: Please insert your coins (both 100 Yen & 500 Yen coins are acceptable) to begin the 25 minute wash. THERE IS NO CHANGE GIVEN BY THE MACHINE. Any additional money added once the cycle has begun will extend the drying time. Additional drying time may be required depending upon the size of the wash load.

We hope that you enjoy your time in our Coin Laundry and your time in Sapporo, Hokkaido. Please make sure and tell your friends about our Coin Operated Laundry. We are open from 6:00 a.m to 11:00 p.m.